




1. Login to the Lockt Software.

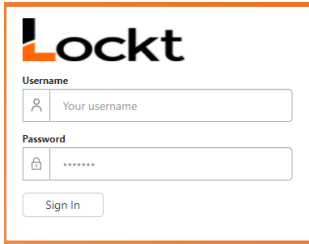


2. From the Home screen of the Lockt Software.

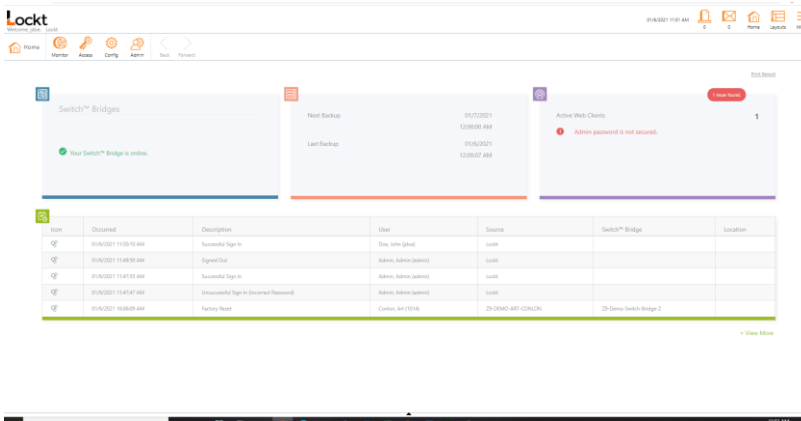


3. Navigate to the Switch Bridges page under the Config menu. Switch Bridges page shows the bridge.

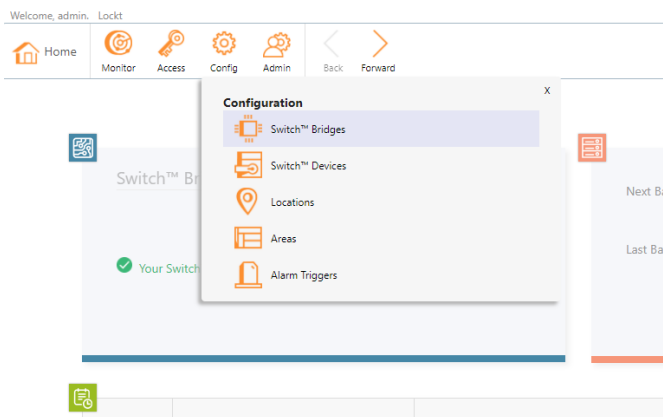


4. Select the bridge under Name button to populate Bridge information.

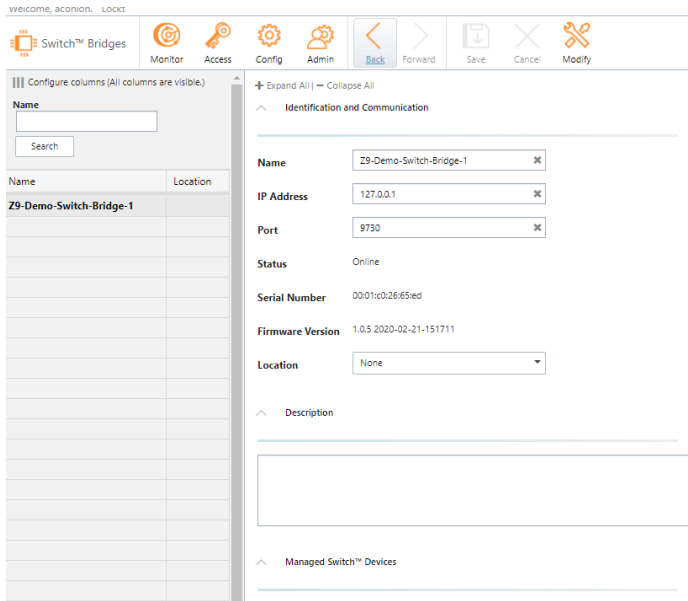


5. Select the Modify button on the menu tab. Select Add Switch Device.

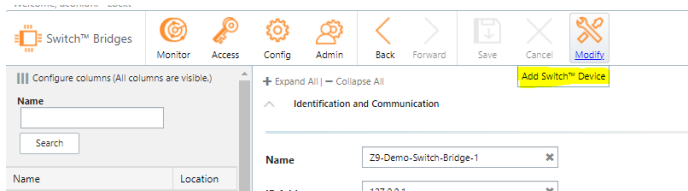


6. A Modify Switch Bridge window appears. Type a unique name and select Add.

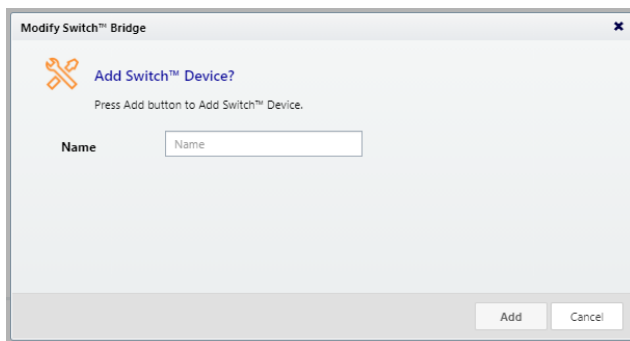

7. Select Config menu then select Switch Devices.

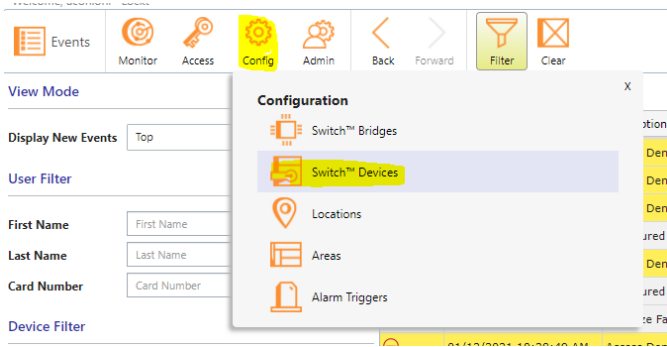

8. The page shows the cores that were added.

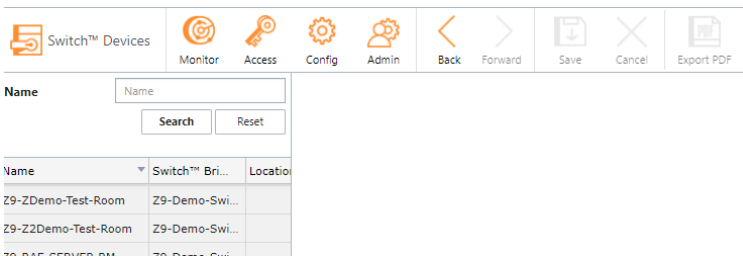

9. Select the core from the list to see the settings.

